


1. Route out hole in the centre of the door stile Screw in timber fixing catches.

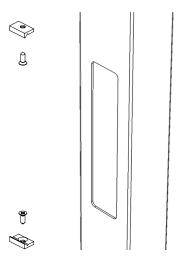


Hole Sizes				
Flush Handle	Hole Size			
FP125	20x105			
FP150	33x144			
FP170	33x164			
FP200	33x194			

2. Push bottom of handle in first to ensure handle locates in catch.



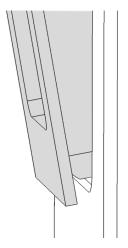

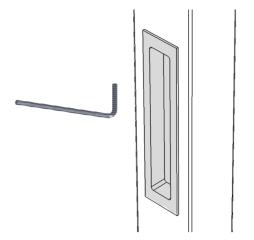

October 27, 2020 63



